
LED NEONFLEX EASY INSTALLATION No Training or Special Tools Required!!



1. Measure your required length of Neon flex round

to the nearest cut interval, according to the statistic we provide, cut Neon flex only on marked cut interval

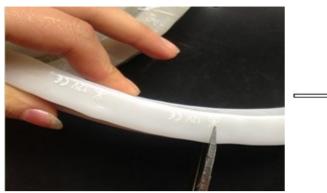

4. Cover the surface with PVC glue



5. Attach Power Cord to the NEONFLEX



8. Cover the surface with PVC glue



2.Insert Front Power Pin into the end of the NEONFLEX



3. Attach the Waterproof shrink Tube



6. Make it stable by hot wind



7. Attach Waterproof shrink Tube to other end of NEONFLEX





9. Attach End cap to the other end of NEONFLEX



12. The whole effect



10. Make it stable by hot win




11. Connect to the power

1. Measure your required length of Neon flex, round to the nearest cut sign,

Using a knife or scissors to cut it



4. Attach the Waterproof shrink Tube

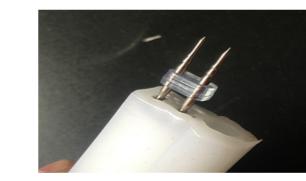

2.Insert Middle Power Pin into the middle of the NEONFLEX




3.Take the other side of pin insert another piece of NEONFLEX.

Adhesive and waterproof with the above mentioned steps(4--6).

About connection:

Fix the AI Mounting Clips and AI track:

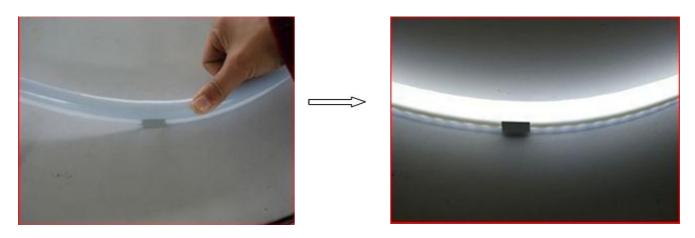

You can according to the shape of the you need to use this AI mou nting clips, just like our dolphin.



The AI track can always keep straight line.